


# Photo Paper Safe

Side View

NO NAILS NEEDED

Carefully square the **inner box** during assembly.  
Use **woodworking glue**; hobby glue may fail in time.  
Use weights (food cans, etc.) while glue sets.

- 1): Assemble and **glue inner box** to base .
- 2): Hold outer lid walls in place with spacers & tape.  
(Use riser shims to hold lid walls higher while gluing)
- 3): Carefully **glue lid to walls** (use weights until glue sets)
- 4): Remove spacers and shims, install hinge screws.  
Paint flat black between the walls.

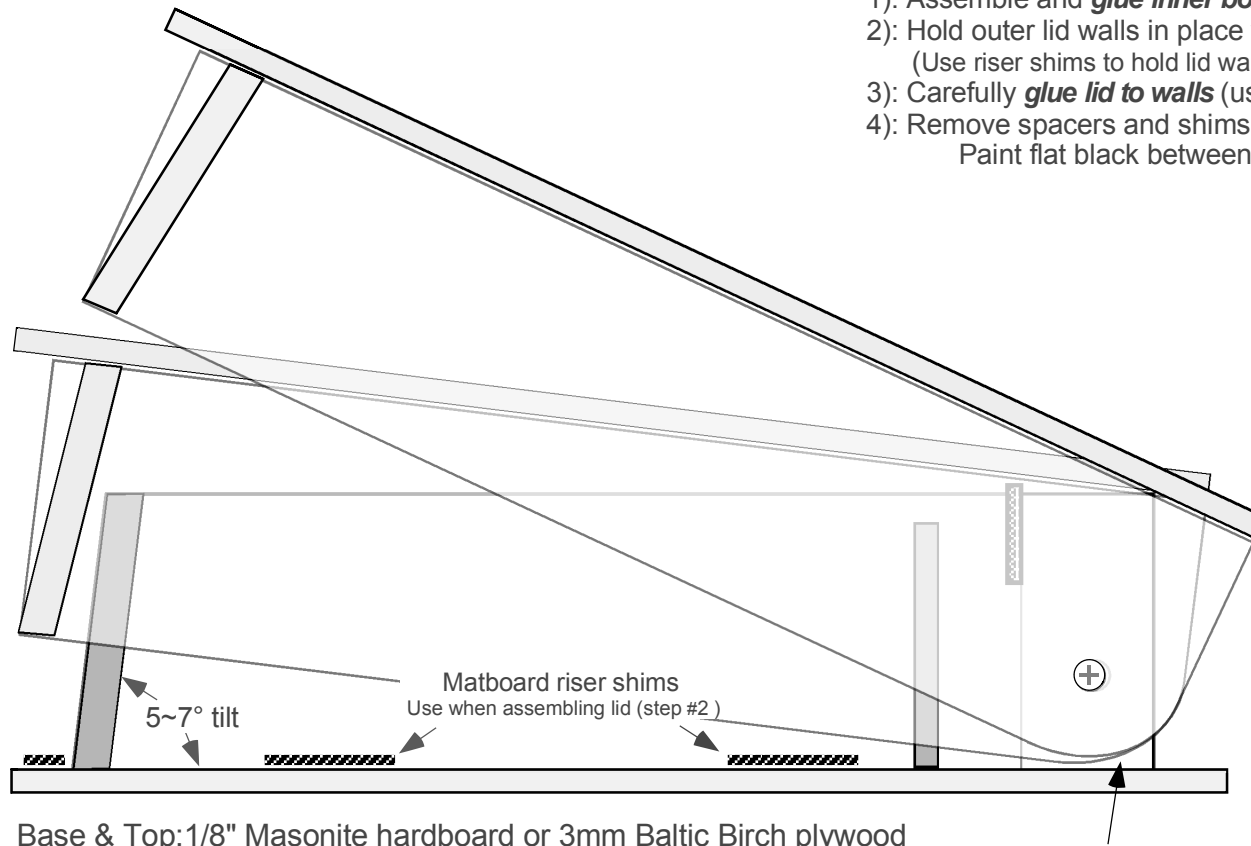

Base & Top: 1/8" Masonite hardboard or 3mm Baltic Birch plywood

Internal Sidewalls, Ends, & Internal finger stops: 1/8 hardboard.

External Lid Sidewalls & Ends: 1/4" Hardboard

Glue all joints (use woodworking glue, no nails needed).

3/4 x 1.5"  
wood end block